



BLOWER MAINTENANCE

After Each Use

- Remove air filter and clean with compressed air
- Make sure to remove cellulose from hoses
- Clean out hopper and remove any debris from agitator arms
- Check guards
- Remove bottom guard and blow out insulation build up around blower and motor
- Clear vent holes on each side of machine.

After 40 Hours of Use

- Check pressure with pressure gauge (replace airlock seals if needed)
- Inspect hoses for cracks and tighten connections
- Inspect power and remote cords
- Inspect chains & chain tension

After 200 Hours of Use

- Check drive alignment and tension
- Inspect electrical components for cracked or loose wires
- Lubricate drive chains with dry lubricant.
- Grease airlock bearings

Yearly

- Replace airlock seals (if not done previously)



Blower Maintenance Guide

Any Questions? Call Pest
Control Insulation at
(770) 766 -6050